



***Better Air. Better Life.™***

[www.airocide.com](http://www.airocide.com)



# IMPORTANT SAFETY INFORMATION



## READ AND SAVE THESE INSTRUCTIONS



### WARNING:

**The Airocide® unit should be used only as recommended in this manual. Failure to follow recommendations can result in serious injury.**

- Keep children away from the unit and supervise them when they are near it.
- Do not drop or insert objects into any openings in the unit.
- Do not disassemble the unit, except for removal of the fascia to replace the reaction chambers.



### WARNING:

**The Airocide® unit, like all electrical appliances, presents the risk of fire, electric shock, and the potential for serious injury or death if improperly used. Always follow these precautions:**

- Plug the unit directly into a 120V AC electrical outlet. DO NOT use extension cords or adapter plugs.
- This unit has a three prong, grounded plug. Use only in a compatible outlet that is installed and grounded in accordance with electrical codes and ordinances. DO NOT alter the plug or force it into any outlet.
- DO NOT use the unit if the cord or plug are damaged.
- Keep the cord out of heavy traffic areas. To avoid fire hazard, DO NOT put the cord under rugs, furniture or appliances, near heat registers, radiators, stoves or heaters.
- DO NOT run the cord under carpeting. DO NOT cover the cord with throw rugs, runners, or similar coverings. DO NOT route the cord under furniture or appliances. Arrange cord away from traffic areas where it might present a tripping hazard.
- DO NOT immerse the unit in water or other liquids or pour water or liquids on the unit.
- DO NOT use the unit with any solid-state speed control devices, such as a dimmer switch, that controls power to the unit.
- DO NOT operate the unit where combustible gases or vapors are present.

## Table of Contents

Clear Air Revolution	2
How It Works	3
NASA to Now	5
Scientific Proof	7
Testimonials	8
Airocide®	9
Warranty	11

## Welcome to the Clear Air Revolution

You just gave yourself and your family an invaluable gift. Clear air. When the air is clear, you are suddenly elevated. Your home becomes a sanctuary where you have the freedom to enjoy more, do more, play more and even be more.

We want to thank you for making the incredible decision to join the clear air revolution. More importantly, every day when you wake up feeling better than you ever thought possible, you'll thank yourself for making the clear choice.

In this packet you will find easy-to-use operating instructions, our technology overview, scientific proof, testimonials, warranty registration information and our Airocide® Works Guarantee. Talk about a different kind of air purifier! Well, it's a different kind of technology from a different kind of company. Welcome to a whole new you.

## The Airocide® Technology

Airocide draws in harmful airborne pathogens and forces them into a densely packed matrix of highly reactive catalysts that are activated by a high intensity 254-nanometer light. The reaction destroys these harmful pathogens on contact. Nothing is captured so there is nothing to clean. All that exits is crisp, clear air.



## How It Works:

1. Place the Airoidice® unit in your bedroom for the first 60 days. This will allow you to experience the clear air difference where you spend the majority of your time. (Most people begin to feel a difference between weeks 4-6.)
2. Plug it in. The unit can be placed horizontally or vertically on any flat surface.
3. Press down the power button located on the back of the unit; the default setting is High for maximum results. There is a Low setting and an Auto setting which adjusts the fan speed should you require a quieter operation at night. (Most people say the fan noise in the High setting helps them sleep better at night.)
4. Breathe in and begin to feel the difference.

**Your Airoidice unit delivers its optimum performance when it's allowed to do what it does best, 24/7.**

### Maintenance

1. There's no need to change a filter or wipe off a plate. Since your Airoidice unit disassembles pathogens at their molecular level, there is nothing to clean.
2. When the indicator light starts blinking (should be in about a year), you'll need to change the two reaction chambers inside your unit. To order new reaction chambers, go to [www.airoidice.com](http://www.airoidice.com).

### Available Accessories

1. Decorative Sleeve
2. Floor Stand
3. Wall Mount
4. Replacement Reaction Chamber Kit

For a complete description of the accessories and pricing please visit [www.airoidice.com](http://www.airoidice.com).

## How It Works:

### Normal Operating Mode

When the power switch is in the "on" position, the front grill is installed and no error condition is detected, one of the lights will indicate the "active" mode. The "active" mode indicator light will be bright when the "active" mode is first selected, then will dim after 10 seconds and remain on until another mode button is pressed again.

### Grill Removed Mode

If the front grill is removed while the power switch is in the "on" position, the unit will go into "standby" mode and the "active" mode indicator light will flash brightly.

### Error Mode

If the front grill is installed with the power switch in the "on" position and one or both of the reaction chambers is missing or non-functional, the unit will enter "standby" mode, causing all of the indicator lights to flash brightly. This condition can be automatically cleared by correctly installing two functional reaction chambers.

### Change Reaction Chamber Mode


When the reaction chambers need to be changed, the "active" mode indicator light will flash dimly.

### No Lights

Indicator lights function only when the unit is plugged in and the power button is in the "on" position.



FRONT

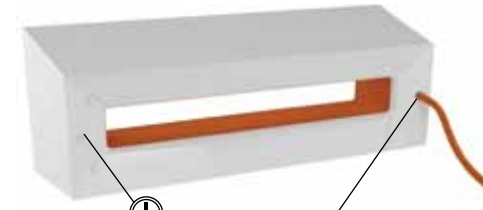

BACK

## NASA To Now

### **“Houston, we’ve had a problem.”**

The iconic phrase spoken by John Swigert, the Command Module Pilot aboard the Apollo 13 mission was the call to action that inspired a team of NASA engineers to solve a problem, pronto. The result was an improvised device that brought the wounded capsule back to earth on April 17, 1970.

The call went out again (somewhat less urgently) when space station astronauts needed to eliminate the ethylene gas produced by plants that accelerates ripening. Again, NASA engineers with help from the University of Wisconsin found a solution: an air purification technology that eliminates 99% of ethylene gas from the air. Gone. No filters. No harmful emissions.

### **A longer-lasting banana.**

The first commercial unit introduced in 1998 to food packers, florists and grocery chains extended the shelf life of flowers, fruits and vegetables by as much as ten days by eliminating the ethylene gas trapped in storage facilities and refrigerators. This one-of-a-kind technology helps save a portion of the 27 billion pounds of fruits and vegetables lost to spoilage each year.

### **The news kept getting bigger, better and bolder.**

Further testing showed the Airocide® Air Purifier was virtually 100% effective in destroying Volatile Organic Compounds (VOC’s) – basically the bad stuff that’s emitted by products you have around your house, like aerosol sprays, cleaning supplies, disinfectants, hobby supplies, dry-cleaned clothing, building materials, paints and paint thinners, strippers, pesticides and even air fresheners. Ironic.

It was also found that the Airocide Air Purifier eliminates pollen, dust mites, viruses, bacteria and other biological pollutants traditional air purifiers couldn’t even attempt. These findings were truly a breath of fresh air.

## NASA To Now

So we moved on. In 2003 the Airocide® Air Purifier was introduced into hospitals, clinics, emergency rooms, dental offices, daycare centers and prisons to help stop the spread of infectious disease. Further studies consistently demonstrate dramatic reductions in mold and bacteria counts.

### **2012: End of days for home pathogens.**

The Airocide Air Purifier has come home. The machine you’ve just purchased represents years of research, testing and proven results. This breakthrough technology eliminates virtually 100% of the VOCs in your home so your family can breathe easier and suffer fewer airborne illnesses, allergy symptoms, and harmful effects caused from mold and chemicals found in homes just like yours.



# Scientific Proof

## 12 Years of Intense Study

We have spent over a decade testing and retesting Airocide®, proving that it works. We have summarized a few outcomes below. For a complete list of studies and their full reports, please visit [www.airocide.com](http://www.airocide.com).

**Surgery** - average results 73% reduction in bacteria and mold

**Office** - average results 72% reduction in bacteria and mold

**Households** - average results 75% reduction in bacteria and mold

**Childcare Center** - average results 60% reduction in bacteria and mold

**Dental Private Practices** - average results 81% reduction in bacteria and mold

## Tested by Major Universities and Government Agencies

**No Ozone** - Airocide tested by the State of Wisconsin Hygiene Laboratory and Air Quality Sciences, Inc.

**Ozone to Oxygen** - Published Paper: "Photocatalytic Decomposition of Ozone to Oxygen at Room Temperature with Titanium Dioxide."

**Mycotoxins** - Toxic Portion of Mold Spores Decomposition by Airocide tested by Texas Tech University.

**Bacillus Anthracis Spores** - University of Wisconsin and the State of Wisconsin Hygiene Laboratory tested Bacillus thuringiensis spores with a 99.9986% Kill Rate in a Single Pass. NASA Published Results.

**Self-Cleaning Airocide Catalyst** - "Mineralization of E. Coli to Water Vapor and Carbon Dioxide," tested and published by The National Renewable Energy Laboratory.

**Peer Reviewed Published Paper** - Texas A&M University "Airocide in a Hospital Operating Room."

**FDA Approved**

## The Only Technology of its Kind

Results from 12 years of scientific testing in the United States, field use on the Space Station, lab studies, case studies and customer testimonials are contained in detail at [www.airocide.com](http://www.airocide.com).

We've got the proof. Airocide works!

# Testimonials

Here's what others who have already joined the clear air revolution have to say:

"Within a week after the Airocide® system was installed, my runny nose and sinus discomfort stopped."

- Janice Belbol - Clifton, NJ

"My 18-year-old daughter has suffered from allergies for eight years. We have tried several different medicines that don't seem to rid her of her allergies. We have been using Airocide in our home for just under five months and her allergy symptoms appear to be completely gone!"

- Richard Pressley - Crown Point, IN

"Over the years I've tried various air purifiers, been on prescription medication, and just plain suffered. I can honestly say that installing an Airocide unit in my bedroom has changed the quality of my life. It is absolutely the best investment in my health I have ever made. Within a few short weeks I was free of any allergy symptoms. And since installing the unit I have not had a single sinus infection. I am a believer in the power of Airocide. It has, quite simply, changed my life for the better."


- Krista Lindsey Willim - Jacksonville, FL

"Our son has had eczema (skin rash) for years. We had been using several steroid creams all these years with little or no success. But, when we put the Airocide machine in his room, we noticed within weeks the eczema had cleared up. We then started backing off the steroid creams until the eczema came back. Now, with the perfect combination of Airocide and the steroid cream, the problem is solved."

- Ari Silverman - Denver, CO

Share your story online at [www.airocide.com](http://www.airocide.com).



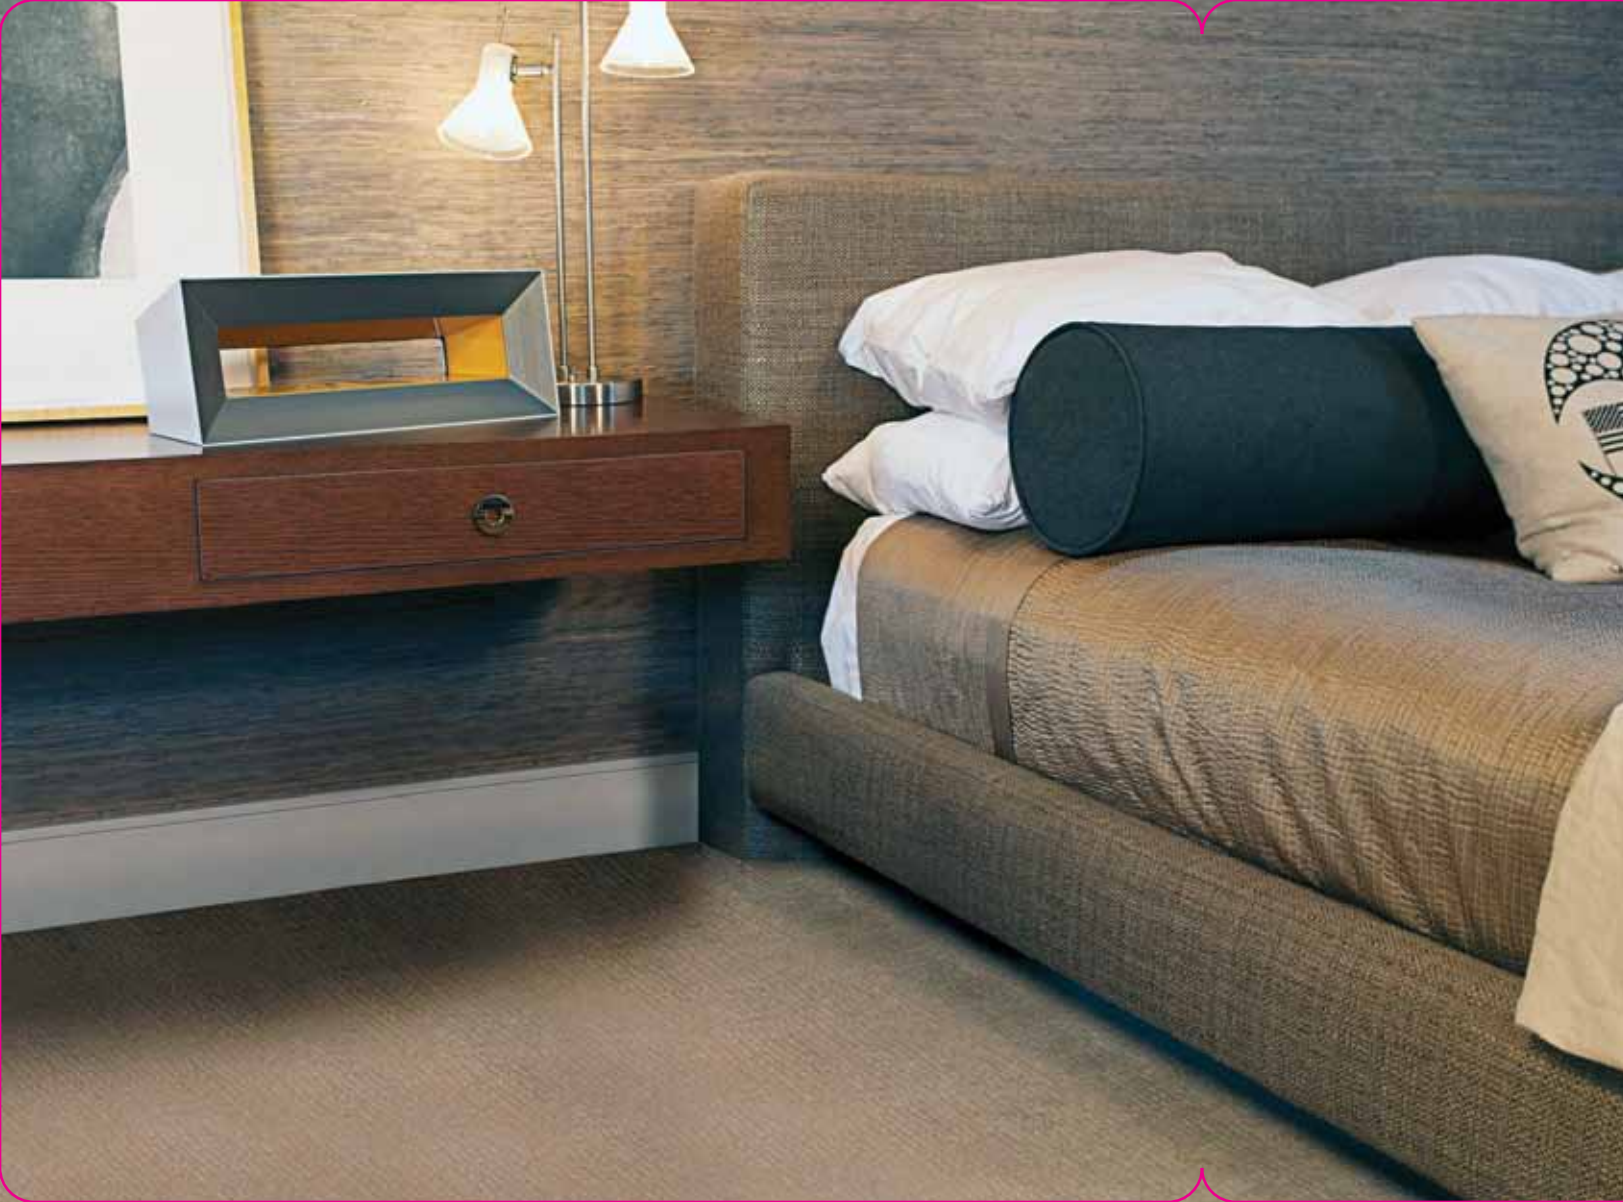

## Five-Year Limited Warranty

Akida Holdings LLC (hereinafter referred to as the “Company”) is pleased to offer the first End User Purchaser (“Consumer”) of an Airocide® Air Purification System a 60-month Limited Warranty, starting from the date of purchase and subject to the following Terms and Conditions.

### Terms & Conditions:

1. The Limited Warranty covers defects in materials or workmanship in the unit for the time period stated above. If there is a defect, and the defect is the result of faulty materials and/or workmanship, the Company or its authorized Franchisee, Dealer, Distributor, or designated agent (collectively referred to as “Authorized Representative”) will, at its discretion, either repair or replace the defective components or the unit. If a defect cannot be repaired within a reasonable number of attempts, the Consumer may elect to either have the unit replaced or obtain a refund of the purchase price.
2. If the unit is found not to have a defect in material or workmanship, the Consumer, if it so desires, may make arrangements to have the unit repaired by the Company. Charges for repairs of this nature, if carried out, shall be paid by the Consumer.
3. In order to repair the Airocide unit and restore it to a fully operational condition, the Company may alter the unit and utilize parts of a differing, but similar, design. Any part of the unit that is replaced may be replaced with either new or refurbished parts. Any part that is replaced will become the property of the Company.
4. While the Company will make every effort to expeditiously provide warranty service, the Company shall not be required to do so within a specific period of time.
5. The repair or replacement of the unit or parts under this Warranty shall not extend the warranty beyond the time period stated above.
6. The Company’s employees or dealers have no authority to vary the terms of this Warranty.
7. Continued use or possession of the goods after expiration of the warranty period shall be conclusive evidence that the warranty was fulfilled to the full satisfaction of the Consumer.

## Five-Year Limited Warranty

### To Obtain Warranty Service:

If you believe there is a defect in materials or workmanship in the product during the warranty period, you can contact Airocide® to request warranty service.

When contacting Airocide to request warranty service, you should be ready to describe the problem with the unit and provide some type of proof of the original date of purchase, unless you previously registered the product.

Airocide can be contacted by mail, telephone, or through the internet. Phone calls need to be made between the hours of 9 AM and 5 PM (local time) Monday through Friday.

Akida Holdings LLC  
13500 Sutton Park Dr. South  
Suite 501  
Jacksonville, FL 32224  
Telephone: 1-800-687-3100  
email: [info@airocide.com](mailto:info@airocide.com)  
[www.airocide.com/warranty](http://www.airocide.com/warranty)

If the unit is sent to the Company for warranty service, the cost of the transportation of the unit to and from the Company service center, or that of an Authorized Representative shall be borne by the Consumer, unless Company and the Consumer agree otherwise, in writing. The Company shall not be responsible for any units lost or misplaced in transit, so the Consumer is encouraged to purchase insurance for the unit during shipping.



## Five-Year Limited Warranty

If the unit is not accepted for warranty service or if the Company determines that the issue with the unit is not the result of a defect in materials or workmanship, the Company shall provide a description of the cause of the issue. If the Consumer disagrees with the Company's determination, prior to pursuing any other remedy, the Consumer must appeal that decision to the Company's Warranty Administrator by sending a letter to the address above explaining why warranty service should be provided. The Warranty Administrator shall have 30 days to respond, and the Consumer shall consider that response for 30 days prior to pursuing any other remedy.

### Exceptions & Exclusions:

The warranty does not cover damage caused by the user, alterations, abuse, misuse, neglect, improper installation, non-observance of operating instructions, accidents, improper use, unauthorized repair, catastrophe/natural disaster, power surges, and normal wear and tear.

The Warranty will cease to be valid if any of the original serial numbers are removed or defaced or if the unit is removed from the country in which it was originally purchased.



## Disclaimer of Implied Warranties and Other Liabilities:

Please read the following disclaimers and limitations carefully.

**There are no warranties that extend beyond the description on the face hereof.**

The seller undertakes no responsibility for the quality of the goods except as otherwise provided herein.

**The seller assumes no responsibility that the goods will be fit for any particular purpose for which you may be buying these goods, except as otherwise provided herein.**

\* \* \*

**This limited warranty is in lieu of all other express or implied warranties of merchantability.**

\* \* \*

**To the extent that the applicable law does not permit disclaimers of certain implied warranties, any applicable implied warranty shall be limited to the express warranty period stated herein.**

**Company's liability is limited solely to repair or replacement.**

**In no event, shall the Company be liable for incidental and consequential damages.**

But, if Company is liable for any reason on any claim - whether based on a statute, contract, warranty, or tort damage to property - Company's total liability shall be limited to the purchase price of the product, except where prohibited by law.



This product has been tested and complies with UL 507, CSA C22.2 No. 113, FCC 47CFR Part 15 (Subpart B, Class B), ICES-003 and the California Air Resources Board (CARB) requirements.

## FCC



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Notice for Customers in Canada:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with

the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CARB

**This air cleaner complies with the federal ozone emissions limit.  
ARB CERTIFIED**

This air cleaner complies with the Federal Ozone Emissions limit and is ARB Certified by the California Environmental Protection Agency's Air Resource Board.

**airocide<sup>®</sup>**  
**AIR PURIFIER**

©2012 Airocide<sup>®</sup>. All Rights Reserved.